

POWERFLEX®

PART NUMBER

PFF57-701

DESCRIPTION

FRONT LOWER ARM FRONT BUSH

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane A Bushes 1 x PTFE/Silicone Grease
2 x Polyurethane B Bushes 2 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove the front lower arm from the vehicle and remove the original rubber bush.
2. Clean any dirt and corrosion from the surface of the shaft, as shown in Figure 1.
3. Insert polyurethane part A into the stainless steel sleeve first and then fit part A and sleeve on the arm shaft, as shown in Figure 2.

Note: Do not fit part A onto the shaft without the stainless steel sleeve over it.

4. Insert polyurethane part B into the arm bracket.
5. Apply some of the supplied grease in the bore of polyurethane part B and fit the bush and bracket assembly onto the sleeve, as shown in Figure 3.
6. Refit the front lower arm to the vehicle and tension all hardware to manufacturers recommended torque settings.



Clean shaft Surface.



Figure 1

Insert bush 'A' into metal sleeve



Figure 2

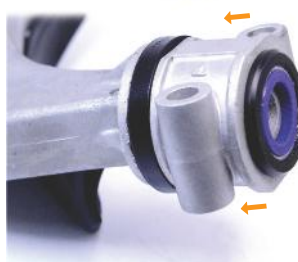


Figure 3