

POWERFLEX®

PART NUMBER

PFF1-603

DESCRIPTION

FRONT ANTI ROLL BAR END LINK MOUNT TO ARM BUSH

INSTALLATION GUIDE

Contents (parts per pack):

4 x Polyurethane Bushes 1 x PTFE/Silicone Grease
4 x M10 Washers

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*

Fitting Instructions:

1. Remove the roll bar link from the car and remove the original bushes.
2. Clean the link and remove any dirt and sharp edges.
3. Assemble the link with the bushes and washers provided, as oriented in Figure 2. Ensure you apply grease to the end faces of each bush.
4. Refit the link to the vehicle and tension all hardware to manufacturers recommended torque settings.



Figure 1

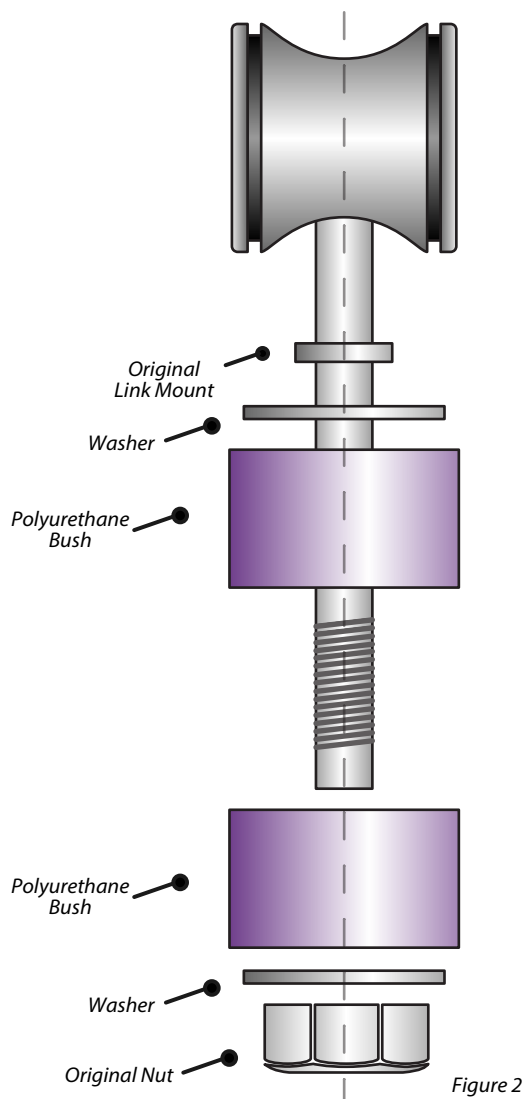


Figure 2