

POWERFLEX®

PART NUMBER

PFF5-122

DESCRIPTION

GEARBOX MOUNTING BUSH INSERT

INSTALLATION GUIDE

Contents (parts per pack):

- 1 x Polyurethane A Bush
- 1 x Polyurethane B Bush

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Support the gearbox from below with a jack or axle stand.
2. Remove the upper gearbox mount from the vehicle.
3. Remove the original rubber dampers and the blue plastic insert from the inside of the mount as the inserts will replace both.
4. Push the PU inserts into the gearbox mount. The B insert will be at the front of the car and the A will be towards the rear of the car, as shown in figure 1. (There will be a gap as they are made to match the OE dampers so there isn't a big increase in NVH)
5. Refit the gearbox mount to the car and ensure all hardware is tightened to manufacturer's recommended torque settings.

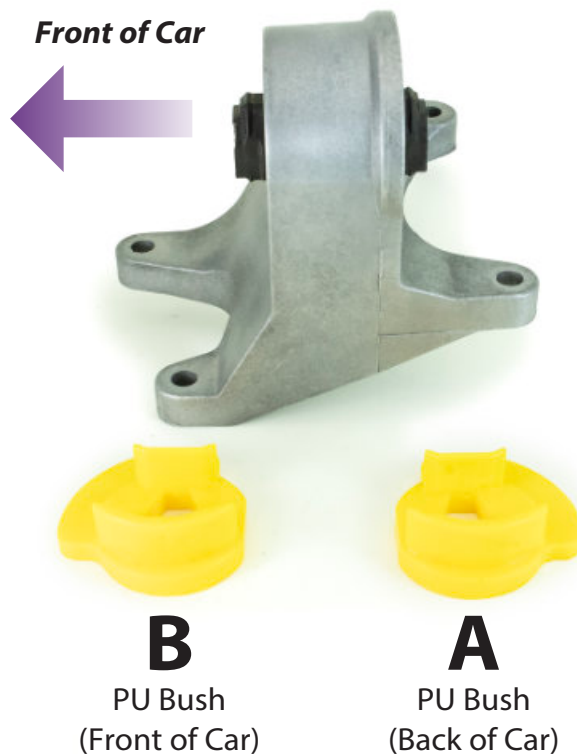


Figure 1



Figure 2