

# POWERFLEX®

## PART NUMBER

# PFF68-101

## DESCRIPTION

## SMART FRONT WISHBONE

## INSTALLATION GUIDE

### Contents (parts per pack):

4 x Polyurethane Bushes      4 x Outer Shells  
2 x Stainless Steel Sleeves    4 x Washers

*Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.*

*It is recommended that:*

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*

### Fitting Instructions:

1. Remove original bush. Using an appropriate tool, remove the original outer shell from the arm.
2. Clean any dirt and corrosion from the arm.
3. Press the supplied outer shell into the arm, with the flanged edge on the inside of the wishbone arm.
4. Insert polyurethane bush into arm with top hat section of bush on the inside of the wishbone arm.
5. Insert stainless steel sleeve into polyurethane bush.
6. Refit arm. Tension all hardware to manufacturers recommended torque settings.

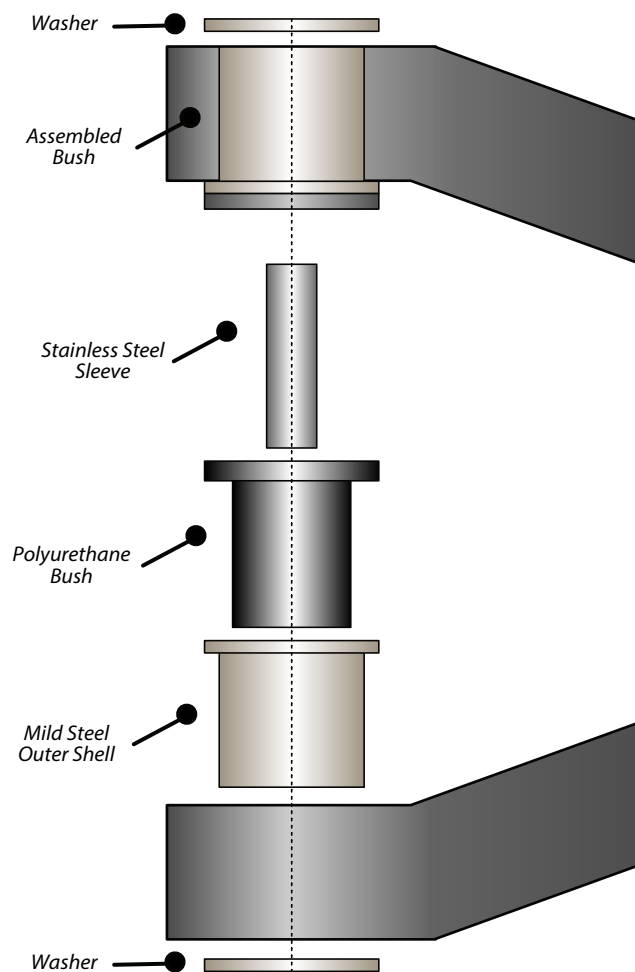


Figure 1