



PART NUMBER

PFR85-512

DESCRIPTION

REAR LOWER TRACK ROD INNER BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- | | |
|-----------------------------|-------------------------------------|
| 4 x Polyurethane Bushes | 1 x PTFE/Silicone Grease |
| 2 x Stainless Steel Sleeves | 2 x Plated Mild Steel Outer Sleeves |

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove the original bush from the arm.
2. Clean any dirt and corrosion from the bore in the arm. Remove any sharp edges from the bore of the arm.
3. Press the plated outer sleeve into the bore of the arm.
4. Insert polyurethane bushes into the bore of the sleeve.
5. Apply grease into bore of the bush and around the top faces. Fit the stainless steel sleeve into the bush.
6. Re-fit arm to the car. Tension all hardware to manufacturers recommended torque settings.

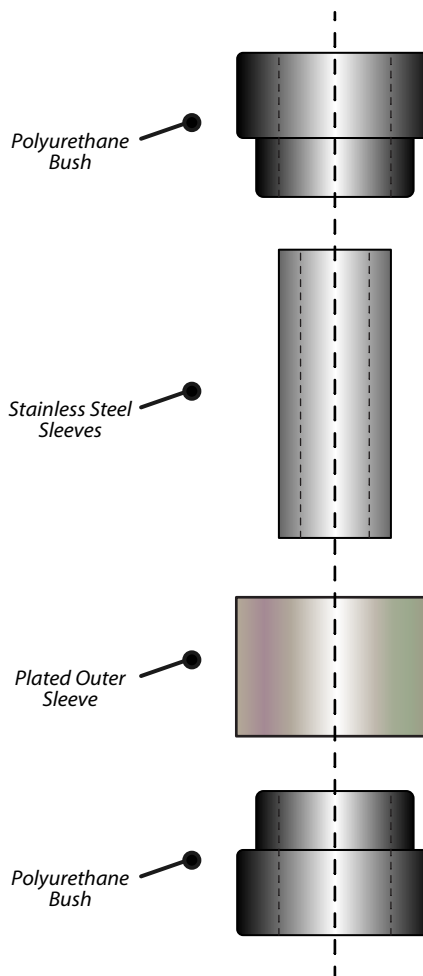


Figure 1