

POWERFLEX®

PART NUMBER

PFR17-611

DESCRIPTION

REAR UPPER WISHBONE INNER BUSH

INSTALLATION GUIDE

Contents (parts per pack):

4 x Polyurethane Bushes	1 x PTFE/Silicone Grease
4 x Mild Steel Outer Shells	4 x Stainless Steel Sleeves
4 x Washer A	4 x Washer B

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove the OEM wishbone from the car and press out the original bush, including its outer shell.
2. Clean the bore of the wishbone, removing/chamfering any sharp edges.
3. Press the supplied outer shell into the arm in the same orientation as the OEM shell.
4. Press the Powerflex bush into the outer shell until the lip of the bush sits flush against the lip of the shell.
5. Apply a small amount of the supplied grease to the bore of the bush and then press in the sleeve. The sleeve will protrude the bush by a small amount, this is where the supplied washers will sit.
6. Apply a small amount of the grease to the end faces of the bush prior to adding the washers to assist rotation. Place Washer A against the larger end of the bush and Washer B against the smaller end of the bush (as shown in Figure 1).
7. With all bushes replaced, re-fit the arm to the car and tighten all fasteners to the manufacturer's recommended torque settings.

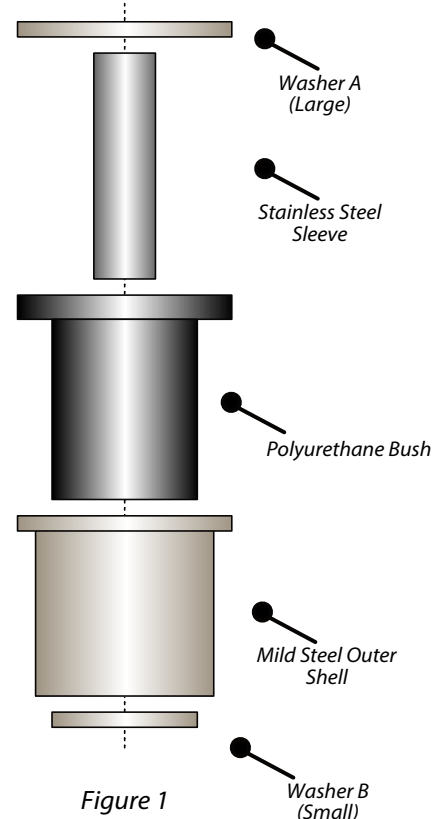


Figure 1