

POWERFLEX®

PART NUMBER

PFF85-1302G

DESCRIPTION

FRONT ARM REAR BUSH, CASTER ADJUSTABLE

INSTALLATION GUIDE

Product Description

Allows on car adjustment of caster. Gives +/- 0.6 degrees.

Contents (parts per pack):

2 x Polyurethane Bushes	1 x PTFE/Silicone Grease
2 x Delrin Washers	2 x Stainless Steel Sleeves
1 x Spanner	2 x Steel Washers

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual. It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Press the original bush out of the arm, removing any dirt and rust from the bore.
2. Push the bush in from the outside of the arm until its shoulder fits flush to the arm. Apply the supplied grease to the bore of the bush.
3. Slide the steel washer onto the adjustable sleeve, applying some grease to both faces of the washer and end face of the bush.
4. Push the sleeve into the bush from the outside of the arm until flush with the washer and bush face.
5. Fit delrin washer onto end of sleeve. Apply grease onto end faces beforehand.
6. Refit arm to car and tension all hardware to manufacturers recommended torque settings.
7. Drive the car to settle the suspension and re-adjust the geometry if required.

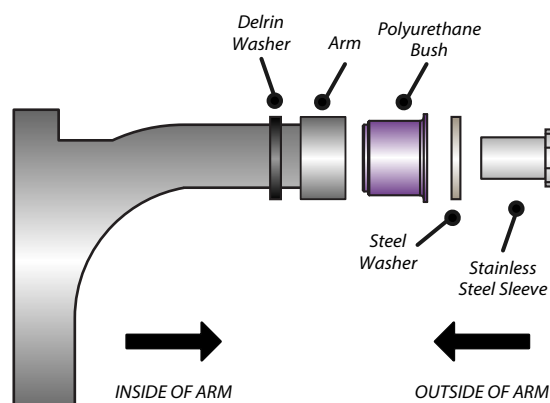


Figure 1 - Orientation of Parts



Figure 2 - Fitted