



PART NUMBER

PFF27-203

DESCRIPTION

FRONT LOWER WISHBONE FRONT BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- 2 x Polyurethane A Bushes 1 x PTFE/Silicone Grease
- 2 x Polyurethane B Bushes 2 x Stainless Steel Sleeves


Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*

Fitting Instructions:

1. Remove the lower arm from the vehicle.
2. Press out the original rubber bush, including its outer shell.
3. Clean away any dirt and corrosion, and remove any sharp burrs using a rounded file.
4. Fit the thicker A Bush on the inside of the arm, and thinner B Bush on the outside of the arm as shown in Fig 1.
5. Apply some of the supplied grease to the bore of the bush and insert the sleeve until flush.
6. Refit the arm to the vehicle and tension all hardware to the manufacturer's recommended torque settings.

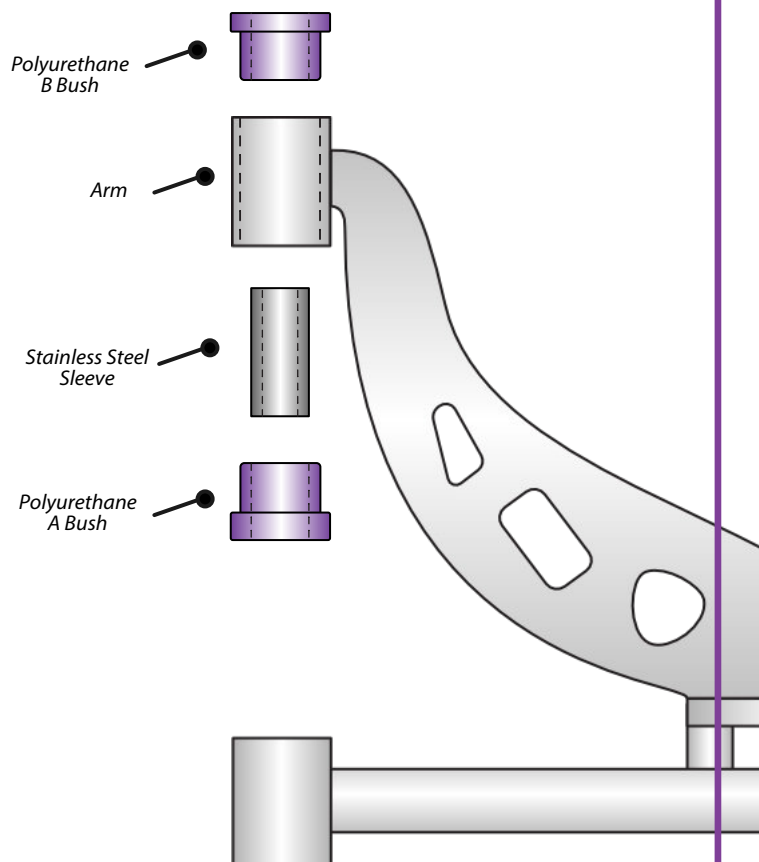

Polyurethane A Bush



Polyurethane B Bush

Figure 1