

POWERFLEX®

PART NUMBER

PFF5-104

DESCRIPTION

UPPER ENGINE MOUNT LINK SMALL BUSH

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane Bushes 1 x PTFE/Silicone Grease
2 x Nylon Washers 1 x Stainless Steel Sleeve

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*



Fitting Instructions:

1. Remove the engine mount from the car.
2. Press out the original bush. Clean any dirt and corrosion from the bore of the arm, chamfer the sharp edges.
3. Push the bushes into the mount.
4. Apply some of the supplied grease to the bore of the bush, the faces of the nylon washers and the outside of the sleeve.
5. Push the sleeve into the bore of the bush.
6. The nylon washer fits over the end of the sleeve and against each bush as shown in figure 1.
7. Refit the mount to the car.

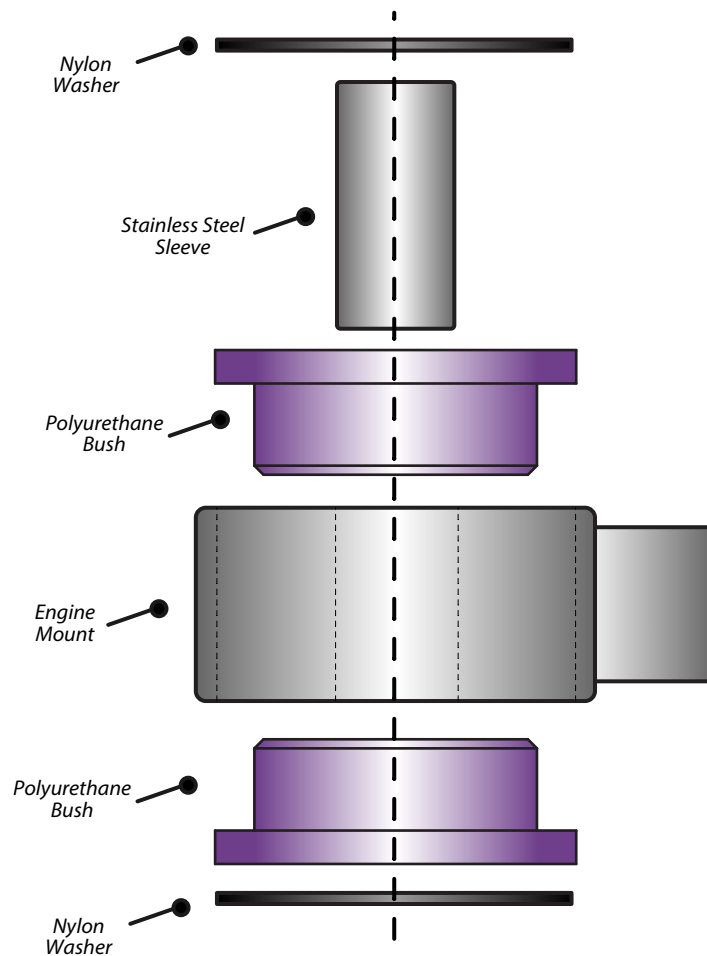


Figure 1