

POWERFLEX®

PART NUMBER

PFF32-702

DESCRIPTION

FRONT WISHBONE REAR BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- 2 x Polyurethane A Bushes
- 1 x PTFE/Silicone Grease
- 2 x Polyurethane B Bushes
- 2 x Polyurethane Washers (For Steel Arms)


Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove the front wishbone bracket from the car, and remove the original rubber bush from the bracket.
2. Clean any dirt and corrosion from the bracket, and file off any sharp edges.
3. If working on a steel wishbone arm, press the polyurethane washer onto the wishbone arm first, as shown in Figure 1.2.
4. Press the polyurethane A bush onto the arm.
5. Insert the polyurethane B bush into the bore of the bracket. Press until the top hat section of the bush sits in contact with the surface of the bracket.
6. Apply some of the supplied grease to the bore of the B bush. Insert the assembled arm into the bore of the B bush ensuring the surfaces of the A and B bushes are flush.
7. Refit the bracket to the vehicle and tighten all fasteners to the manufacturer's torque settings.

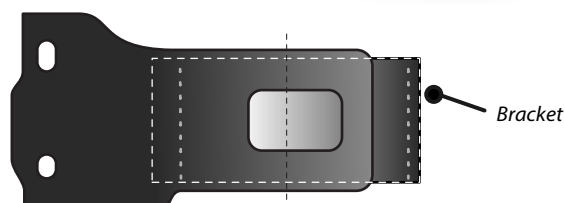

Aluminium Arm:

Steel Arm:

