

POWERFLEX®

PART NUMBER

PFF69-702

DESCRIPTION

FRONT WISHBONE REAR BUSH

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane Bushes
4 x Mild Steel Washers

2 x Stainless Steel Sleeves
1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove the original rubber bush from the arm, clean any dirt and corrosion from the bore in the arm. Using a file, remove any sharp edges from around the bore of the arm creating a small chamfer.
2. Insert the polyurethane bush into arm with the lip labelled top sitting on the topside of the arm (facing upwards on the car) as shown in figure 2. **Note: Apply some washing up liquid to the outside of the bush for an easier fitting. Also, insert the bush into the arm at an angle so that one part of the lip is already in the bore of the arm. This ensures that when the bush is pushed in the rest of the lip will follow (Illustrated in Figure 1).**
3. Apply the powerflex grease to the bore of the polyurethane bush.
4. Insert stainless steel sleeve into the bore of the polyurethane bush.
5. Place a washer either side of the bushing and reattach to car.
6. Once arm is refitted, tension all hardware to manufacturers recommended torque settings.

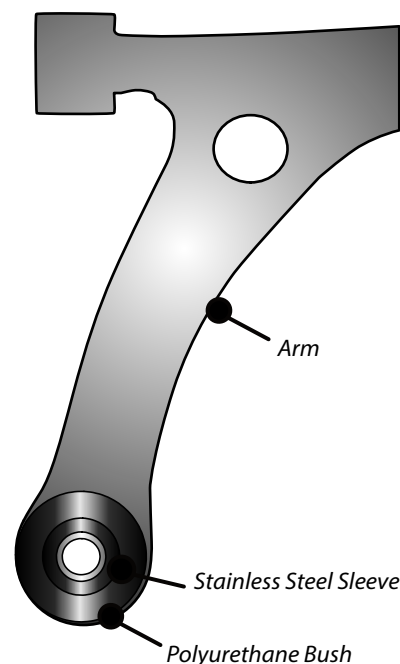


Figure 3



Figure 1

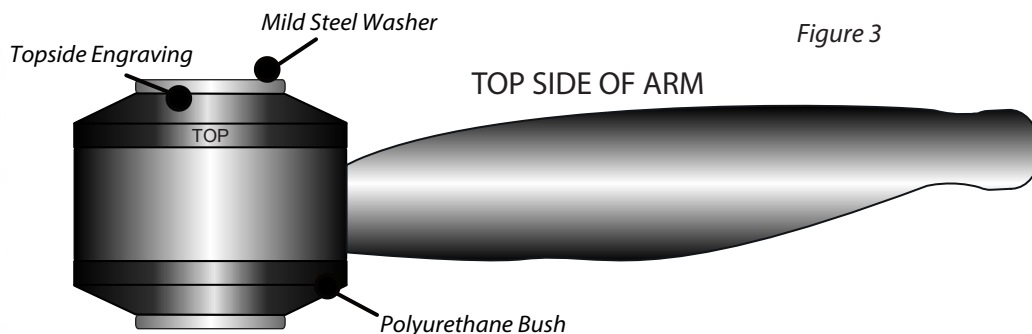


Figure 2