



PART NUMBER

PFF85-1302

DESCRIPTION

FRONT ARM REAR BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- 2 x Polyurethane Bushes
- 1 x PTFE/Silicone Grease
- 2 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*

Fitting Instructions:


1. Remove original bush from the arm, clean any dirt and rust from bore in arm.
2. Push in the bush from the outside of the arm, push the bush in until its shoulder fits perpendicular to the arm as shown in figure 2.
3. Apply some of the supplied grease to the bore and end faces of each bush.
4. Push the sleeve into the arm.
5. Refit arm to car and tension all hardware to manufacturers recommended torque settings.



Figure 1



Figure 2

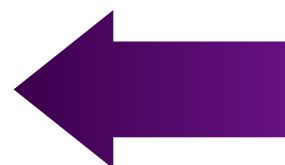

Outside of Arm