

POWERFLEX®

PART NUMBER

PFR85-1310G

DESCRIPTION

REAR ARM OUTER BUSH, ADJUSTABLE

INSTALLATION GUIDE

Product Description

Allows on-car adjustment of camber. Gives +/- 0.5 degrees

Contents (parts per pack):

2 x Polyurethane A Bushes 2 x Stainless Steel Sleeves 1 x PTFE/Silicone Grease
2 x Polyurethane B Bushes 2 x Delrin Washers 1 x C Spanner

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*



Fitting Instructions:

1. Remove original bush from the arm, clean any dirt and rust from bore in arm.
2. Push in the A bush from the outside of the arm, push in the B bush in from the inside of the arm. Apply some of the supplied grease to the bore of the bush.
3. Apply some of the supplied grease to both faces of the washer, slide the washer onto the sleeve.
4. Push the sleeve into the bush from outside of the arm, the adjusting head of both bushes on the arm will be on the outside faces.
5. Refit to the car, carry out alignment check, adjust to set desired geometry.
6. Drive the car to settle the suspension and adjust the geometry to required setting.

Polyurethane
A Bush
Outside

Polyurethane
B Bush
Inside



Figure 1

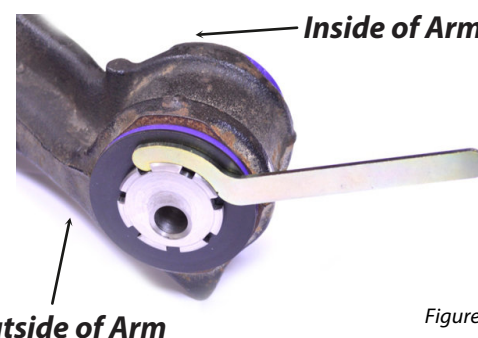


Figure 2



Figure 3