



PART NUMBER

**PFR85-1311G**

DESCRIPTION

**REAR ARM INNER BUSH, ADJUSTABLE**

### INSTALLATION GUIDE

#### Product Description

Allows on-car adjustment of camber. Gives +/- 0.5 degrees

#### Contents (parts per pack):

1 x Polyurethane A Bush (Left)    1 x Polyurethane A Bush (Right)  
1 x Polyurethane B Bush (Left)    1 x Polyurethane B Bush (Right)  
2 x Stainless Steel Sleeves    1 x PTFE/Silicone Grease    1 x C Spanner

*Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.*

*It is recommended that:*

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*


#### Fitting Instructions:

1. Remove original bush from the arm, clean any dirt and rust from bore in arm.
2. Align the location pips on the bush with the bore on the inside of the arm.
3. Push in the A bush from the outside of the arm, push in the B bush in from the inside of the arm (see figure 2). Apply some supplied grease to the bore of the bush. Note: left A and B bushes are to be fitted to the left side of the car as a set
4. Apply some of the supplied grease to both faces of the washer, slide the washer onto the sleeve.
5. Push the sleeve into the bush from outside of the arm, the adjusting head of both bushes on the arm will be on the outside faces.
6. Refit to the car, carry out alignment check, adjust to set desired geometry



Polyurethane A Bush

Polyurethane B Bush

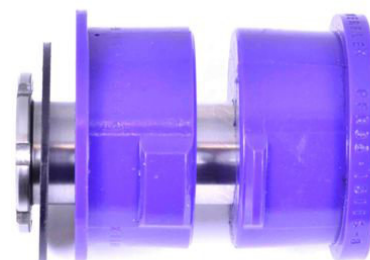

Delrin Washer

Figure 1

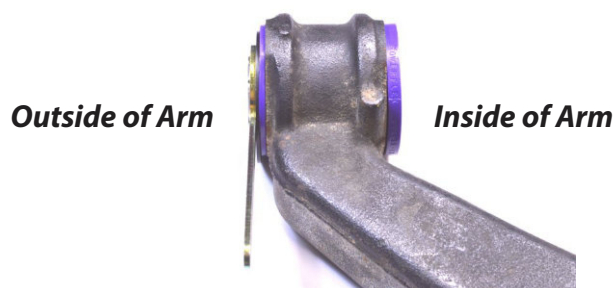


Figure 2



Figure 3